

MX 531

ELECTRIC SOCKET TESTER EARTH & 30 mA RCD TESTS



PRACTICAL: Totally autonomous (no battery needed) with immediate display without adjustments or selection of a position

CLEVER: A tester suitable for any socket configuration with its rotating head and compact size

INDISPENSABLE: se on 2P+E sockets with verification of the connection of the line, neutral and earth conductors.

QUICK & EASY: Instantaneous display on the two-colour LCD screen facilitating interpretation of the measures according to the conformity of the installation.

EFFECTIVE:

- Measures the voltage and displays the connection configuration
- Measures the earth without tripping any RCDs: < 15 mA
- A test button to trip the 30 mAAC RCD with the display held for 7 s





IEC 61557-6 **IEC** 61010-2-030



melcix

230é

TEST





A 3-in-1 tester which interfaces with any socket in electrical installations using a TT earthing system

- Voltage measurement and verifications of the conductor positions
- 2. RE earth resistance measurement
- 30 mA_{sc} RCD operation test 3.

Portable, ultra-compact and lightweight, the MX 531 fits comfortably in one hand and is plugged directly into the socket. It quickly detects the earth resistance by no-trip measurement and checks the connections of the line, neutral and earth conductors in a TT system. The 30mA trip checks that there is an RCD connected to the power socket.

| MX 531 | |
|---------------------------------|--|
| RE earth resistance | 3 to 1,999 Ω |
| Autoranging | 3 to 199.9 Ω and 180 Ω to 1,999 Ω |
| Resolution | 0.1/1Ω |
| Accuracy | +/-(3% of reading + 5D) |
| RE error / earth fault | Red screen display |
| Protection / Overload rating | 300V CAT III |
| Voltage | 100 to 400 V |
| Line-to-neutral voltage | 100 to 420 V-50/60Hz – indication of L/N inversion – if <195 V or >253 V: fault |
| Resolution | 1V |
| Accuracy | +/- (2% + 1D) |
| Line-to-earth voltage | 195 V to 253 V, 50/60 Hz |
| Indication of position | Line, neutral and earth |
| 30mA _{ac} RCD | Test if RE correct |
| Rating | 30 mA and time <200 ms |
| Conditions | 230 V line and neutral, current 30mA 0% and +6%, time +/-4ms |

| GENERAL SPECIFICATIONS | |
|--------------------------|---|
| Display | Two-colour blue / red backlit LCD, 46x50 mm, 2,000 counts |
| Socket | 2P +E-Types E and F Rotating plug -90°/+180° |
| Safety | EN61010-2-030, pollution degree 2, CAT III-300 V |
| Operating temperature | -10 to +45°C |
| Standards | Test as per IEC/EN 61557-1-3 and 6 - EMC as per IEC 61236-1 |
| Dimensions / Weight / IP | 185X65X53 mm / 230 g +/-50 g / IP40 |

The MX 531 earth tester is reliable is reliable, simple and accurate with a resolution as fine as 0.1 Ω .

Once the instrument has been connected correctly (earth present, 230 V supply, phase right or phase left), the earth resistance value is displayed instantaneously in the lower part of the 3-digit LCD screen.

As soon as the MX 531 is connected to a 2P+E 10/16 A socket, it instantaneously displays the socket's connection status, taking advantage of the top-quality backlit LCD screen.

The display changes colour according to the conformity of the installation: if the installation complies with the standards, the display turns blue, but it changes to red if there is a fault or a problem with the earth connection.

A pictogram of the socket on the display makes it easy to:

- check the connection to the earth RE (the display turns red with a special pictogram if no earth is present)
- identify the phase position: a pictogram warns you if there is L/N or L/PE inversion
- check the conformity of the 230 V mains voltage (red display if connection between phases, RE> 100 Ω or > 2000 Ω or > 253 V)
- \triangleright from 3 to 99 Ω, the screen background colour is blue (less than the 100 Ω threshold stipulated by NF C 15-100)
- From 100 à 1999 Ω, the screen background is red
- 30 mA RCD test by pressing the TEST button, with display hold for 7 seconds

X Not ok **☑**OK

STATE AT DELIVERY AND REFERENCE

MX 531

MX0531

EARTH RCD30mA

Equipped with a wrist strap, bag and user's manual on paper



12 - 16 rue Sarah Bernhardt 92600 Asnières-sur-Seine Tél.: +33144854485 Fax: +33146277389 info@chauvin-arnoux.fr www.chauvin-arnoux.com/fr

FRANCE

Chauvin Arnoux Ltd Unit 1 Nelson Ct, Flagship Sq, Shaw Cross Business Pk Dewsbury, West Yorkshire - WF12 7TH Tel: +44 1924 460 494 Fax: +44 1924 455 328 info@chauvin-arnoux.co.uk www.chauvin-arnoux.com

